

Band	Start range (GHz)	End range (GHz)
1a	487.5	553.5
1b	562.5	628.5
2a	634	718
2b	722	794
3a	807	852
3b	866	953
4a	957	1,053
4b	1,054.5	1,114
5a	1,116	1,236
5b	1,235	1,272
6a	1,430	1,558
6b	1,578	1,698
7a	1,701	1,794
7b	1,793	1,902

Table 1: Frequency ranges of HIFI subbands.